


X-CLAMP QR EVO

ENGLISH

Thank you for purchasing a Carbon-Ti product, any small aesthetic imperfection is due to the handmade manufacturing and contribute to exalt the handcrafted nature.

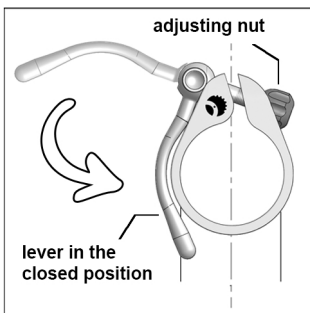

Before you start

Check the size and the proper fitting between the X-Clamp QR EVO and your frame.

The size of the seatpost clamp should be the same diameter as that of the seat tube: a tolerance larger than $+0,5$ mm might adversely affect the installation.

Installation

Clean the frame surface which comes into contact with the seatpost clamp. Insert the seatpost clamp until the internal lip meets the top of the seat tube, and align the slots.

Screw the adjusting nut so that the lever is in tension at approximately 50% of its race, then tighten the lever until it is completely closed. Check the seatpost position and tightness of the seatpost clamp periodically.

**X-Clamp QR EVO
is 100% Made in Italy**